


## SHOCK CORD INSTALLATION INSTRUCTIONS

Tools Required: (2) 7/16" wrenches or adjustable pliers and a wire coat hanger.

1. Form coat hanger into a long straight wire with a ¼" hook on one end.
2. Remove frame bolts from floor brackets. Save bolts and nuts for use later.
3. Separate parts from old shock cord.
4. Insert one end of new shock cord into U-frame and push through tube until it comes out other end.
5. Place a bolt through one loop so that it keeps shock cord from being pulled into tube.

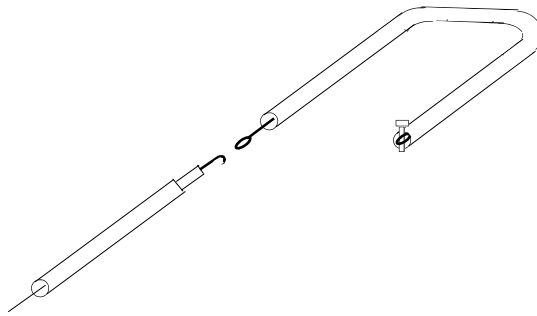

6. Push hook end of wire through floor pole so that hook is coming out of crimped end.
7. Place hook over loop in shock cord, making sure that bolt in step (5) is keeping other end of cord from being pulled into U-frame. Pull cord through floor pole with wire until loop reaches end of pole. Line up loop with ¼" Hole in floor pole and floor bracket and insert bolt through bracket, floor pole and shock cord. Install nut being careful not to crush tube.
8. Repeat steps (6) & (7) for remaining floor pole, being careful that wire hook is over loop in shock cord and you have hold of wire before you remove bolt that is holding shock cord at the end of the U-frame.

